

# 1 UPDATE THE N160H FIRMWARE BY USB2.0 INTERFACE

## 1.1 COPY THE UPDATE FILE TO THE USB DRIVE FROM PC

1. Please go to our website <http://www.emtec-international.com/en-eu/drivers> to get the latest firmware release.
2. Plug the USB drive to the PC and backup the entire data of the USB drive. Right click the USB drive and select Format item. Format the USB drive as FAT32 file system.
3. Copy the update file that name as "update.bin" to the root of the USB drive. Then remove the USB drive from the PC.

## 1.2 UPDATE THE N160H BY USB INTERFACE

1. Plug the USB flash drive that with the update file to the USB port.
2. Go to main menu, then "configure" and press "666666" (or select System/Software/USB Upgrade) to start upgrade process. Select "update.bin" file and press "OK". Wait until the upgrade progress showing 100% and upgrade complete.
3. The device will restart and you can then remove the USB flash drive.

**NOTE: Please do not remove the USB drive from the N160H or power off the N160H during upgrading process. Otherwise you can damage the N160H.**

